

Baofeng Menu Definitions
Ozzie N4SCY
Titusville Amateur Radio
Club
TARC.CouB
PO Box 73
Titusville FL
USA 32781

Thanks to the Chinese Radio
Documentation Project
<http://radiodoc.github.com>
Ozzie N4SCY
N4SCY@amsat.org
<http://TitusvilleARC.Org>
This doc: [http://TARC.Club/
BaofengList.pdf](http://TARC.Club/BaofengList.pdf)

Press MENU, followed by the digits of the option you want to change. Press the up & down arrows for selections, and press MENU again to Select. Press EXIT to confirm your selection.

0 Squelch Level
1 STEP - Frequency STEP
2 TXP - Transmit Power
3 SAVE - Battery SAVE
4 VOX - Vvoice Operated TXP
5 WN - Wideband/Narrowband
6 ABR - Display Abbreviation Time
7 TDR - Dual Watch
8 BEEP - Keypad BEEP
9 TOT - time Out Timer
10 R-DCS - Receiver DCS
11 R-CTCS Receiver CTCSS
12 T-DCS - Transmitter DCS
13 T-CTCS - Transmitter CTCSS
14 VOICE - Voice Prompt
15 ANI-ID - Automtice Number ID
16 DTMFST - DTMF Tone of transmit
17 S-CODE - Signal CODE
18 SC-REV - Scanner Resume Method
19 PTT-ID - When to send PTT-ID
20 PTT-LT - Signal Code Sending Delay
21 MDF-A - Channel Mode A Display

22 MDF-B - Channel Mode B Display
23 BCL - Busy Channel Lockout
24 AUTOLK - Automatic Keypad Lockout
25 SFT-D - Frequency Shift Direction
26 OFFSET - Frequency Shift Amount
27 MEM-CH - Store a Memory Channel
28 DEL-CH - Delete a memory channel
29 WT-LED - Display back-light color
30 RX-LED - Display back-light color, Receive
31 TX-LED - Display back-light color, Transmit
32 AL-MOD - Alarm Mode
33 BAND - Band Selection
34 TDR-AB - Transmit selection while in Dual Watch mode
35 STE - Squelch Tail Elimination
36 RP-STE - Squelch Tail Elimination through a repeater
37 TPR-RL - Delay the Squelch tailof repeater
38 PONMSGs - Power On message
39 Roger - roger BEEP
40 RESET - Restore Defaults